
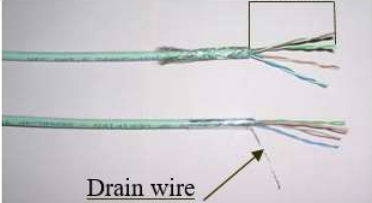
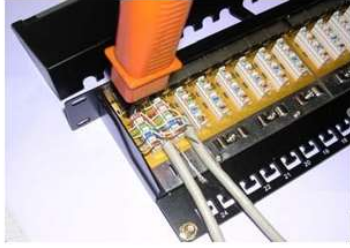
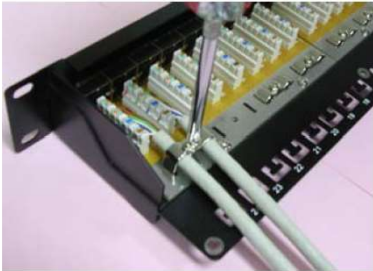
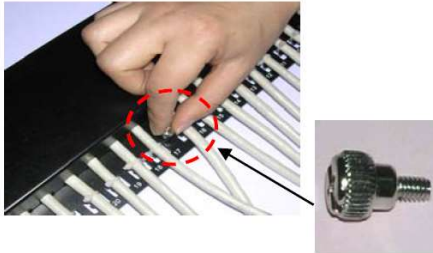



Installation instructions for following items:

- 26.11.0316 ROLINE Cat.6A (Class EA) 10" Patch Panel, 12 Ports, STP, grey
- 26.11.0328 ROLINE Cat.5e (Class D) 19" Patch Panel, 24 Ports, STP, black
- 26.11.0329 ROLINE Cat.5e (Class D) 19" Patch Panel, 24 Ports, STP, grey
- 26.11.0351 ROLINE Cat.6 (Class E) 19" Patch Panel, 24 Ports, STP, grey
- 26.11.0361 ROLINE Cat.6 (Class E) 19" Patch Panel, 24 Ports, STP, black

<p>1</p> 	<p>2</p> 																		
<p>Load down the screws and open the metal cover.</p>	<p>Strip approximately 50mm from the cable jacket, fold back the foil or braid shield, and separate the wire into 4 pairs each</p>																		
<p>3</p> <table style="width: 100%; border: none;"> <thead> <tr> <th style="text-align: center; border: none;"><u>T568A</u></th> <th style="text-align: center; border: none;"><u>T568B</u></th> </tr> </thead> <tbody> <tr> <td style="border: none;">Pin 5 White/Blue</td> <td style="border: none;">Pin 5 White/Blue</td> </tr> <tr> <td style="border: none;">Pin 4 Blue</td> <td style="border: none;">Pin 4 Blue</td> </tr> <tr> <td style="border: none;">Pin 1 White/Green</td> <td style="border: none;">Pin 1 White/Orange</td> </tr> <tr> <td style="border: none;">Pin 2 Green</td> <td style="border: none;">Pin 2 Orange</td> </tr> <tr> <td style="border: none;">Pin 3 White/Orange</td> <td style="border: none;">Pin 3 White/Green</td> </tr> <tr> <td style="border: none;">Pin 6 Orange</td> <td style="border: none;">Pin 6 Green</td> </tr> <tr> <td style="border: none;">Pin 7 White/Brown</td> <td style="border: none;">Pin 7 White/Brown</td> </tr> <tr> <td style="border: none;">Pin 8 Brown</td> <td style="border: none;">Pin 8 Brown</td> </tr> </tbody> </table>	<u>T568A</u>	<u>T568B</u>	Pin 5 White/Blue	Pin 5 White/Blue	Pin 4 Blue	Pin 4 Blue	Pin 1 White/Green	Pin 1 White/Orange	Pin 2 Green	Pin 2 Orange	Pin 3 White/Orange	Pin 3 White/Green	Pin 6 Orange	Pin 6 Green	Pin 7 White/Brown	Pin 7 White/Brown	Pin 8 Brown	Pin 8 Brown	<p>4</p> 
<u>T568A</u>	<u>T568B</u>																		
Pin 5 White/Blue	Pin 5 White/Blue																		
Pin 4 Blue	Pin 4 Blue																		
Pin 1 White/Green	Pin 1 White/Orange																		
Pin 2 Green	Pin 2 Orange																		
Pin 3 White/Orange	Pin 3 White/Green																		
Pin 6 Orange	Pin 6 Green																		
Pin 7 White/Brown	Pin 7 White/Brown																		
Pin 8 Brown	Pin 8 Brown																		
<p>Follow the direction on the color-coding sticker to position T568A or T568B wiring, separate a little space on proper position and insert the wire pair by pair into each slot.</p>	<p>Press foil or braid shield to contact ground, and keep the cable straight.</p>																		
<p>5</p> 	<p>6</p> 																		
<p>Fasten the screws through metal case to hold tightly down for two cable jackets in the same time.</p>	<p>Place the metal cover onto the bottom case and fasten the screws.</p>																		
<p>7</p> 	<p>Cable tie</p>																		
<p>Then complete the installation.</p>																			